



DX-80

HOW TO CHANGE DATE & TIME

Please follow all directions.

System Date and Time

Enter programming by dialing Feature # *
enter password “# # # # # # # #”
press [show]
Dial 08-14
press [save]
Press [show]
press [chg] for the year
press [next] to enter month, day, weekday, hour, minute
press [chg] after each field
Press the HOLD button to save programming
Press ON/OFF to exit

Vicemail Date and Time

Press the [Voice Mail] key
When asked for your password dial #
Press # 70 when you hear the main greeting
Enter password 70
Press 6 at the mailbox's main menu
Dial 7 to change the time
Press 1 to change and follow instructions

Communications Unlimited
5013 W. Irving Park Road
Chicago, IL 60641
773.282.6222